Installation and Assembly - Extension Column Stabilizer

Model: ACC 050


IMPORTANT! Read entire instruction sheet before beginning installation and assembly.

WARNING! Installer must verify that the ceiling will safely support the combined weight of all attached equipment and hardware.

PARTS LIST DADT

PARI#	QIY.	DESCRIPTION
A 128-1029	2	extension column stabilizer bracket
B 510-9163	4	#10 x 1 1/2 wood screw
C 540-9440	4	1/4 SAE flat washer
D 560-0008	1	hose clamp

Note: Actual parts may appear slightly different than illustrated. IMPORTANT: If using different bolts, the bolts must be A325 grade.

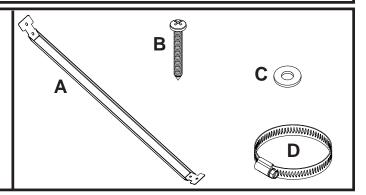





Before starting make sure that ceiling mount and extension column are firmly in place.

For Wood Stud Only: Align the stabilizer bracket (A) with the side of the extension column and wood stud as shown below. Using the stabilizer bracket (A) as a template drill two 3/16" (5mm) dia. holes to a maximum depth of 2" (51mm) into the wood stud. Repeat on other side.


IMPORTANT: Make sure stabilizer bracket (A) is flat on wood stud.



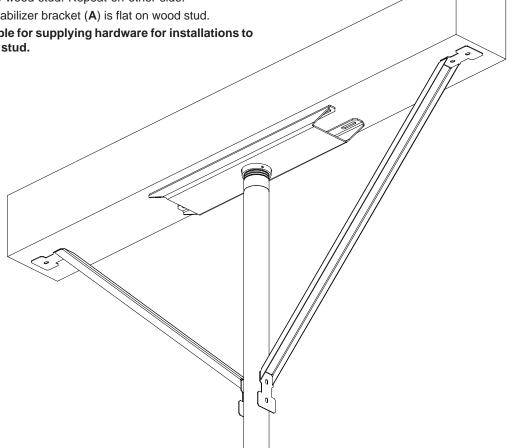

1 of 2

ISSUED: 07-19-02 SHEET #: 128-9138-1

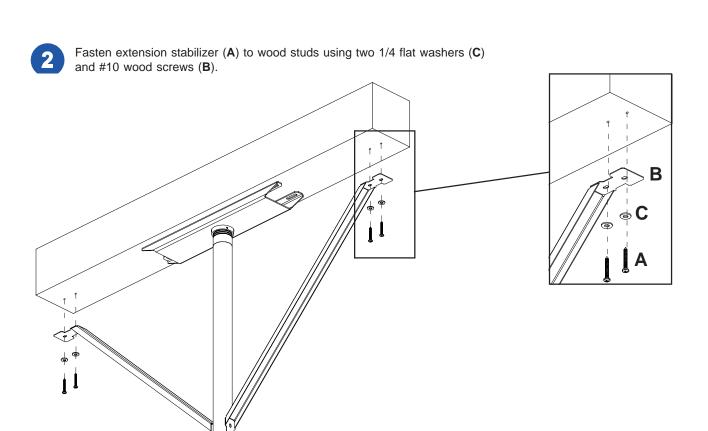

Fasten extension stabilizer (A) to extension column use hose clamp (D). Tighten hose clamp (D) until extension stabilizers (A) are completely secured and column is stabilized.

